

Audio features for ongoing Secure Call

Adjusting audio volume

You can adjust the volume of the secure call in the same way as that one of a standard call.

To adjust the volume during a secure call:

- Use the volume key on your phone (if available).
- Use the scroll key, scrolling left to lower volume or right to raise it.

 Unknown macro: 'builder-show'

 Unknown macro: 'builder-show'

Checking in progress calls

Advanced features