

# SNOM 300 Configuration Manual

## Procedure for upgrade firmware

- a. Open the Web User Interface of the snom and navigate to the Software Update page.
- b. Copy and paste this URL:  
<http://provisioning.snom.com/download/fw/snom300-8.4.18-SIP-f.bin>  
into the Firmware field and press load
- c. The phone reboots and may ask you to perform the update, click 'Yes'.



Do not disconnect the power at anytime!

After that, the phone is upgraded to version 8.4.18.

## Configuration of the Phone:

- a. Open the Web User Interface of the snom and navigate to the Setup/Identity1 page, login tab.
- b. Set Account, Authentication Username and password with the correct data that you have.
- c. Set Registrar with the IP Address (or DNS) of Server Sip.
- d. Set Outbound Proxy in this form : 'sips:ip\_of\_the\_srv(or dns):5061'.
- e. Goto in the Setup/Identity1 page, SIP tab
- f. Set Support Broken registrar to ON (click on this check two times for activate).
- g. DTMF via SIP Info set to On.
- h. Goto in the Setup/Identity1 page, RTP tab
- i. Set RTP Encryption to ON.
- j. Set SRTP Auth-tag to AES-32.
- k. Set RTP/SAVP to Mandatory.
- l. Set Packet Size to 20ms
- m. Set Media Transport Offer to UDP